


# ATV LADDER STYLE TIRE CHAINS

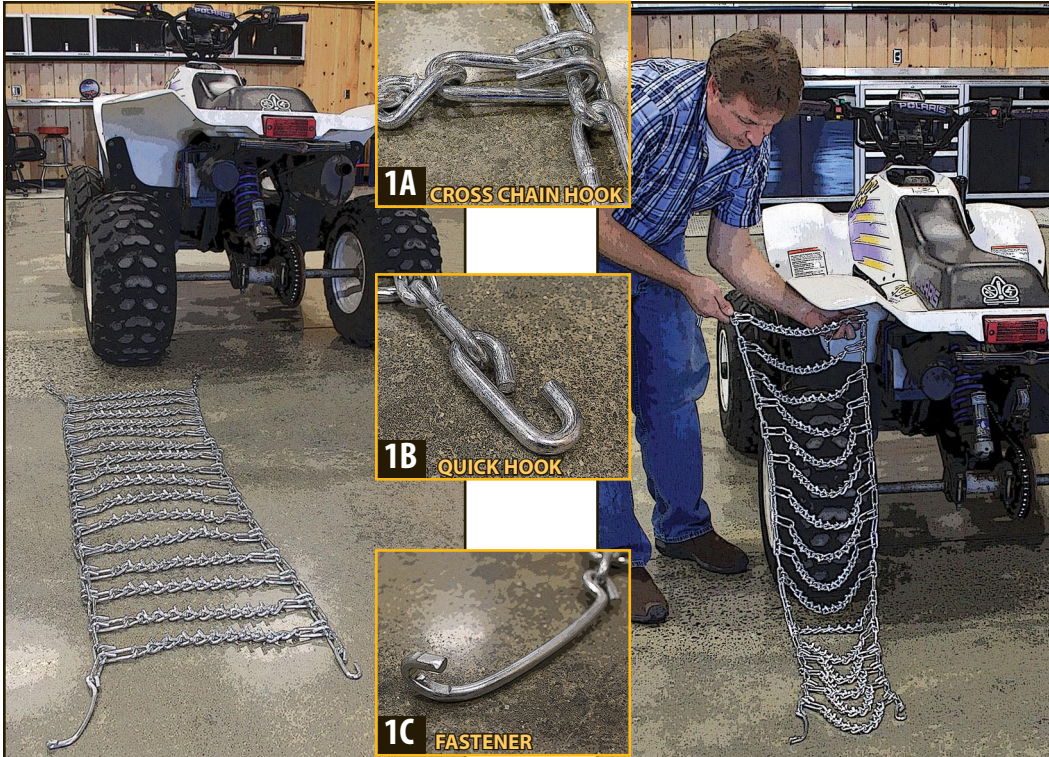

**1A** CROSS CHAIN HOOK

**1B** QUICK HOOK

**1C** FASTENER

## 1. LAY CHAINS OUT FLAT

behind atv tire with aggressive side of chains facing upward. Make sure ends of cross chain hooks are facing up (1A). Position quick hook (1B) on the inside of tire, and the side chain fastener (1C) on the outside of tire. Remove all twist and tangles. ( See NOTE.\* )

**SPEED LIMIT WITH CHAINS**  
**30**

## 2. DRAPE CHAINS OVER TIRE

in the same position. Make sure aggressive side of chains, and ends of cross chain hooks face up and away from tire. Position chains to touch the ground in front of the tire and tuck first cross chain under tire a bit in preparation to roll over them.

## 3. ROLL ATV FORWARD

over chains until the quick hook and fastener are positioned midway on the tire and both side chain ends are easily accessible. Adjust chains to be centered on tire treads.

## 4. ATTACH QUICK HOOK AND FASTENER



**INSIDE TIRE**

**4A.** Inside first. Pull inner side chain tight and attach link to quick hook. Note the number of links remaining.




**OUTSIDE TIRE**


**4B.** Count the same number of links on the outer side chain and place end of fastener through that link.



**4C.** Fold fastener back toward side chain to tighten. To increase tension, place fastener one link lower and fold back. Re-tighten inner quick hook.

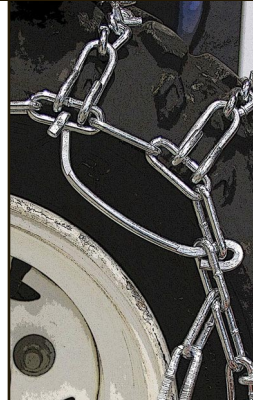


**4D.** Attach fastener under link on side chain. Tire chains should fit snug. To tighten more, REPEAT STEPS 4A-4D.

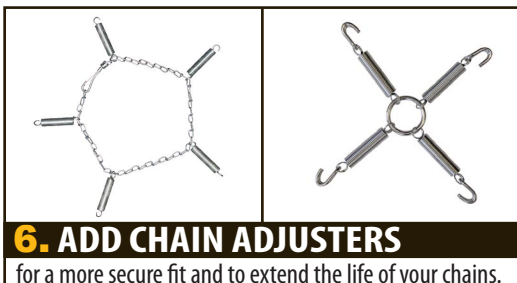

## 6. ADD CHAIN ADJUSTERS

for a more secure fit and to extend the life of your chains.

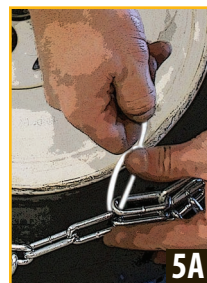

**5A**



## 5. TEST DRIVE ATV, INSPECT & RE-TIGHTEN

tire chains by REPEATING STEPS 4A- 4D so chains fit snug around the tire. Make sure the quick hook and fastener are secure. Attach extra links back to the side chain using wire, zip ties or cable ties (5A).